HRI SQUARE BODY HIDE AWAY HEADLIGHT ASSEMBLY PICTURES

Picture 1:
Measure and mark radiator core support

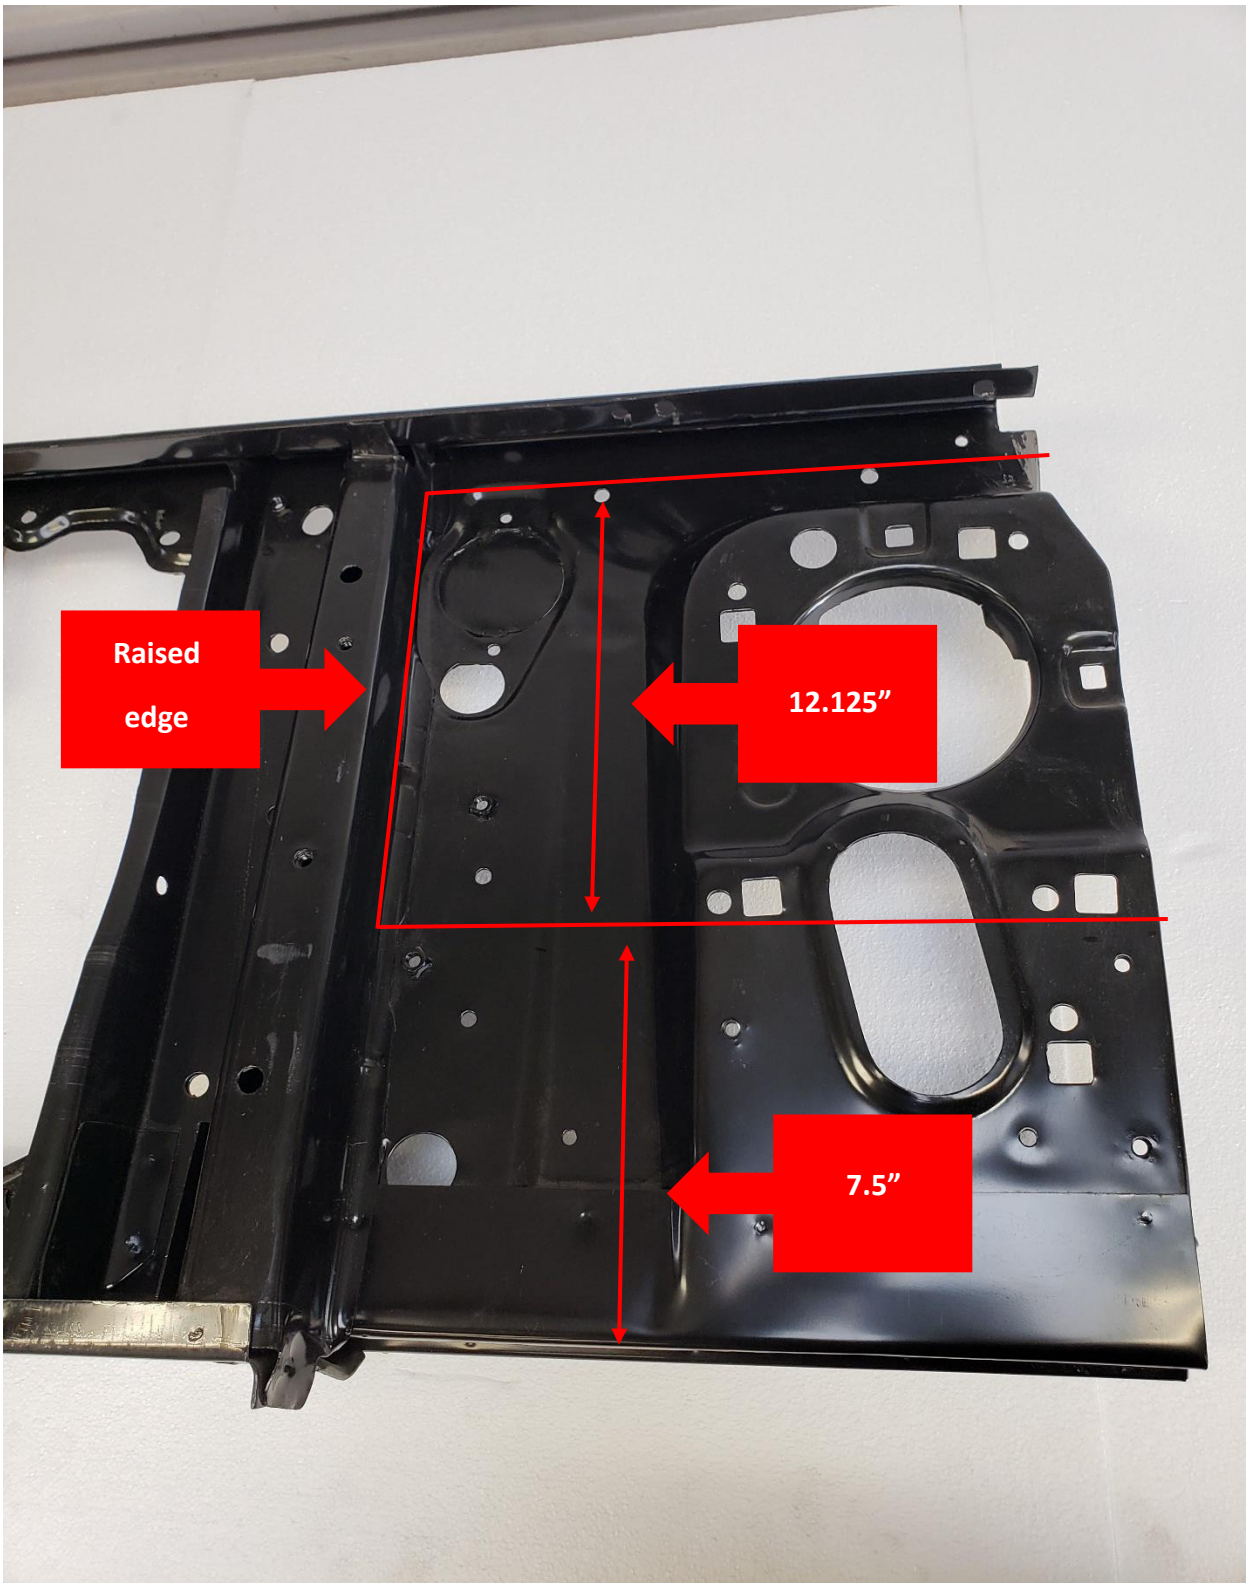

HRI SQUARE BODY HIDE AWAY HEADLIGHT ASSEMBLY PICTURES

Picture 2:
test fit sheet metal pan insuring that the pan slides inward far enough so that the outside edge of the pan is in-line with the outside edge of the core support

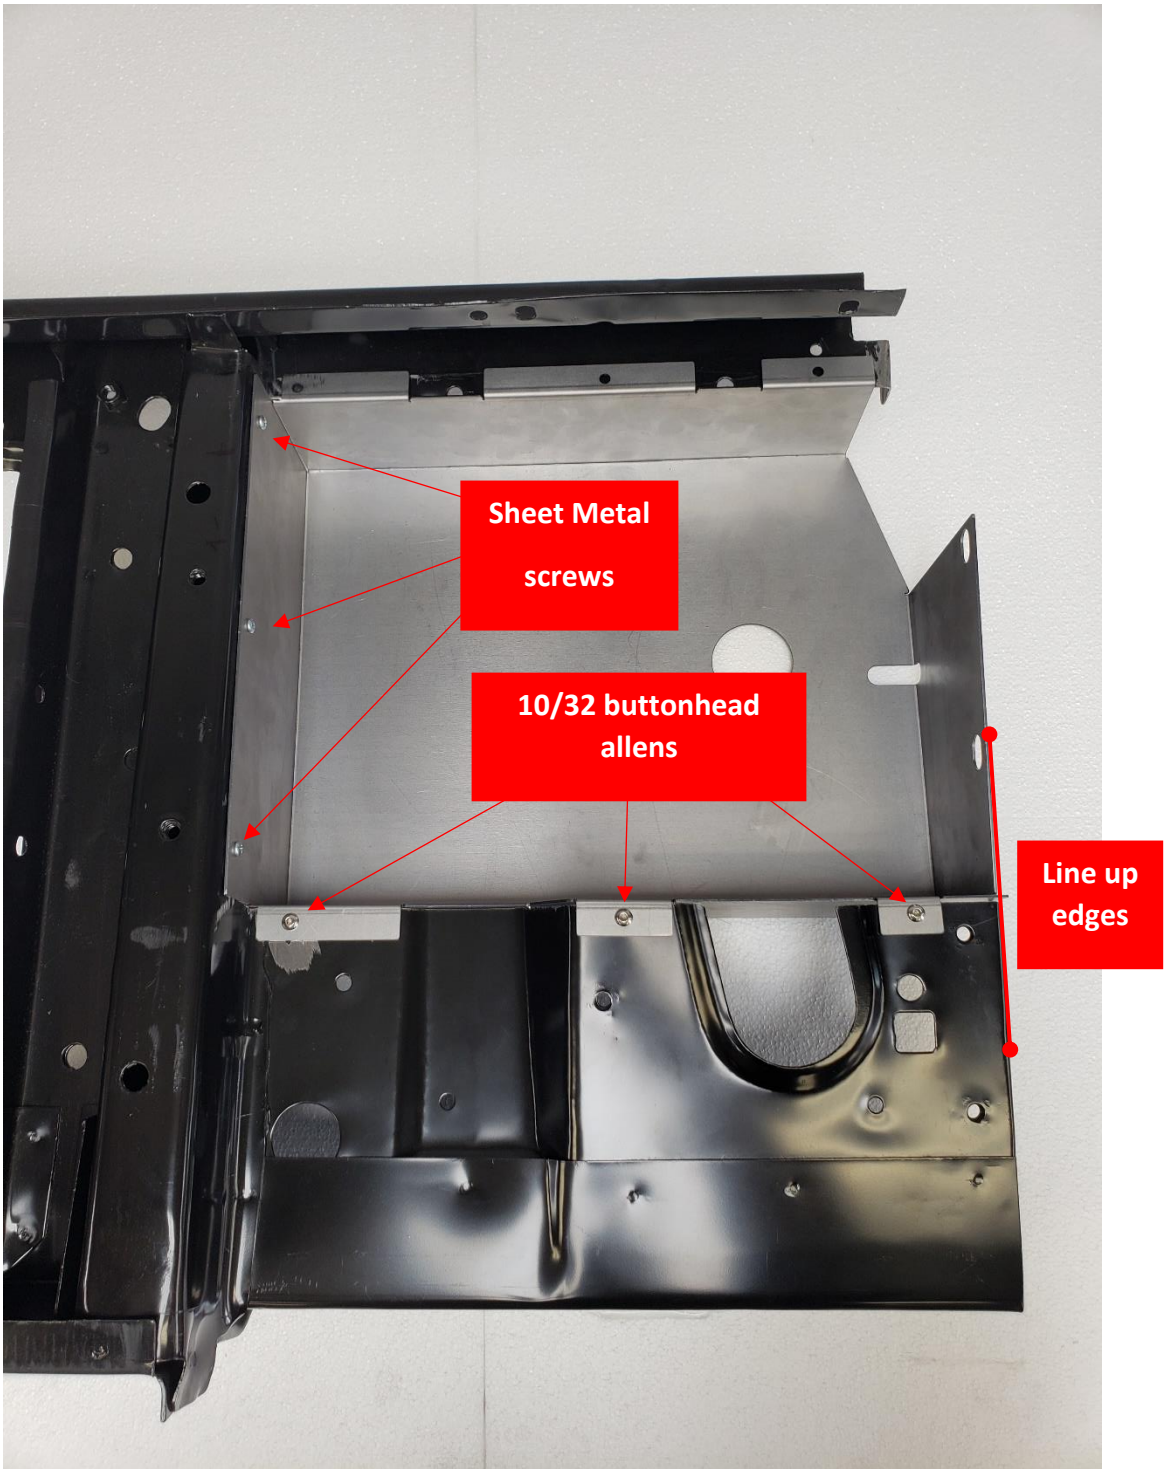

HRI SQUARE BODY HIDE AWAY HEADLIGHT ASSEMBLY PICTURES

Picture 3:
Take factory grille/headlight trim piece, flip upside-down and mark it to be cut

Picture 4:
Marked area removed

HRI SQUARE BODY HIDE AWAY HEADLIGHT ASSEMBLY PICTURES

Picture 5:
Upper valance

HRI SQUARE BODY HIDE AWAY HEADLIGHT ASSEMBLY PICTURES

Picture 6:
Hold up trim, mark area to be removed

Picture 6a:
Marked area to be removed

HRI SQUARE BODY HIDE AWAY HEADLIGHT ASSEMBLY PICTURES

Picture 7:
Motor and door assemblies

HRI SQUARE BODY HIDE AWAY HEADLIGHT ASSEMBLY PICTURES

Picture 8:
Motor and door assemblies (closed)

HRI SQUARE BODY HIDE AWAY HEADLIGHT ASSEMBLY PICTURES

Picture 9:
Motor and door assemblies (open)

HRI SQUARE BODY HIDE AWAY HEADLIGHT ASSEMBLY PICTURES

Picture 10:
Reinstall headlight trim piece using the 8/32 screws and nuts

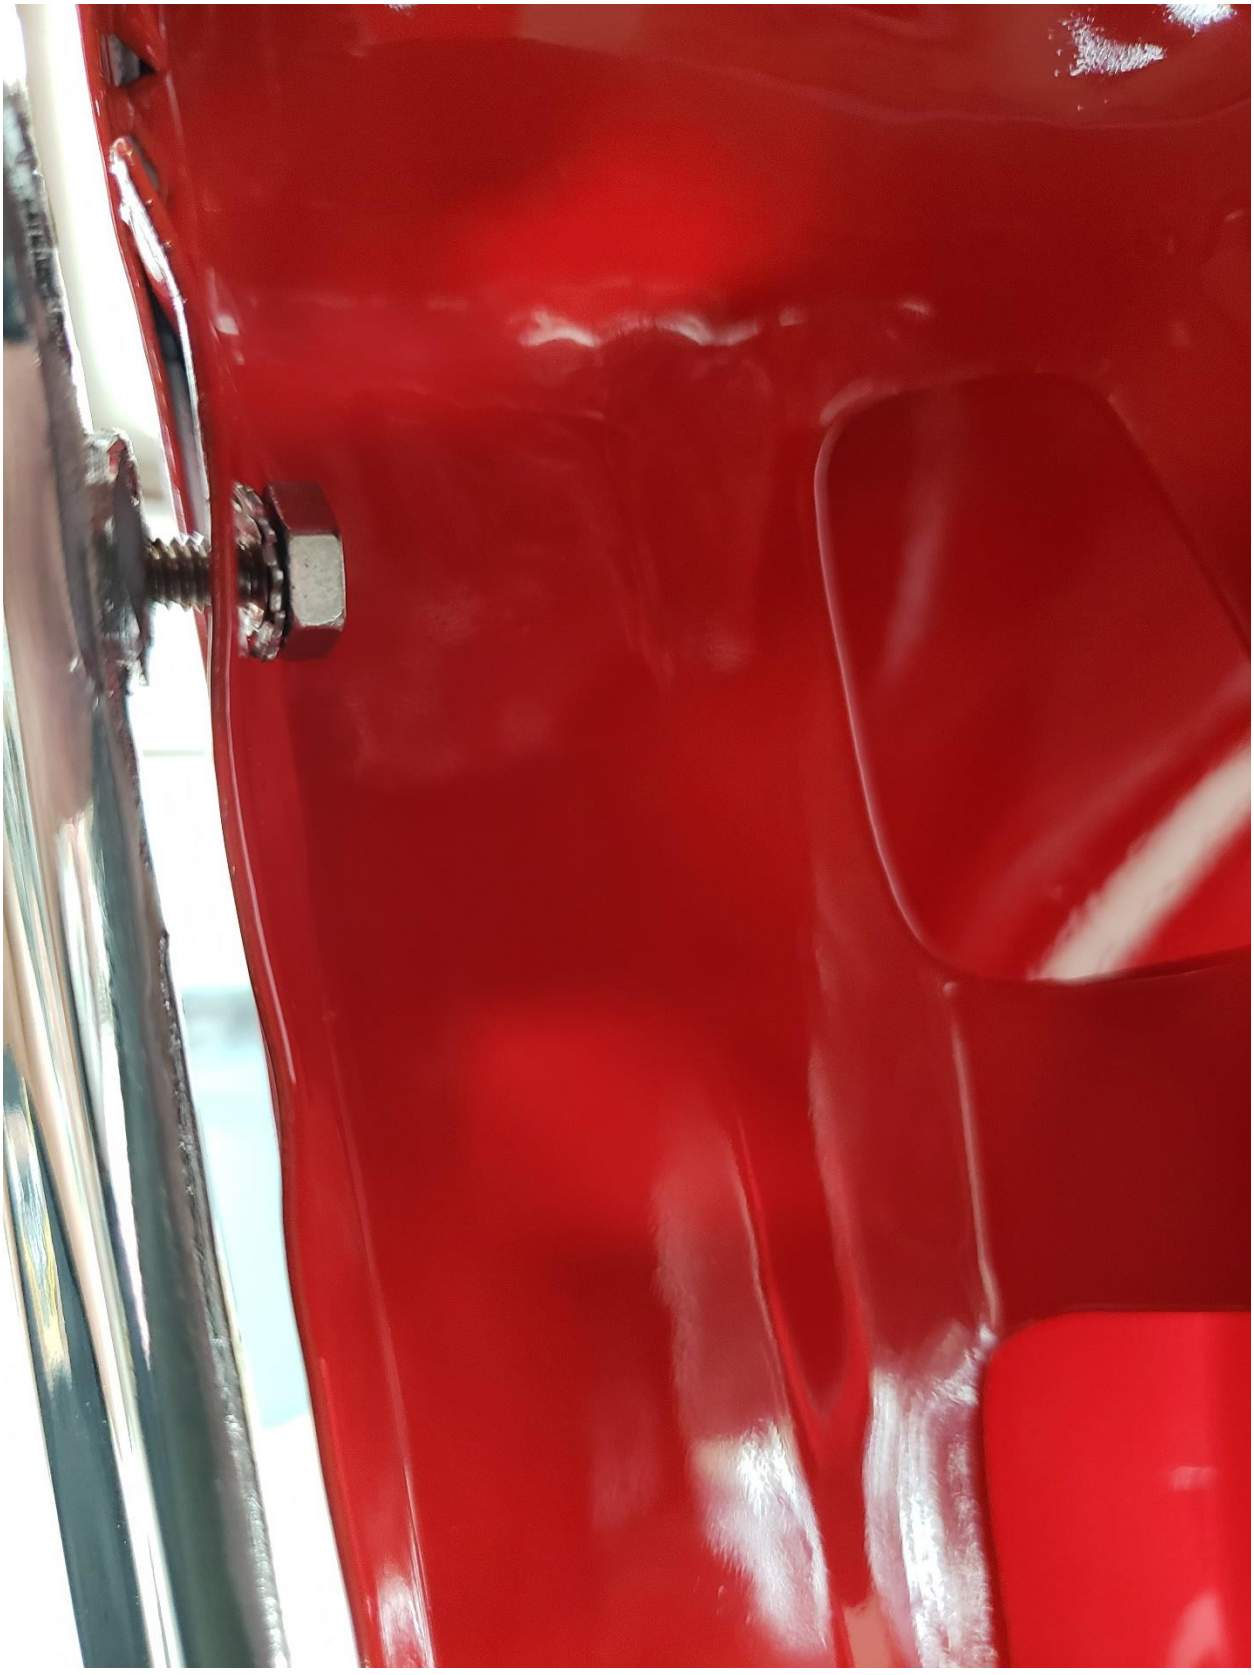

HRI SQUARE BODY HIDE AWAY HEADLIGHT ASSEMBLY PICTURES

Picture 11:
final adjustment can now be made for the headlight motor and door assemblies

Picture 12:
Completed assembly

*****It is VERY IMORTANT that the headlight plug adaptor be plugged into the passenger side FIRST.*****

WARNING! Each time you connect your battery, the black control box has to reset itself. It tries to close the headlight doors even if they are already closed. Stand clear while reconnecting your battery.